


How to connect miners to VNISH HUB monitoring system


1. Register in vnish hub monitoring system :

<https://my.vnishhub.com/login>

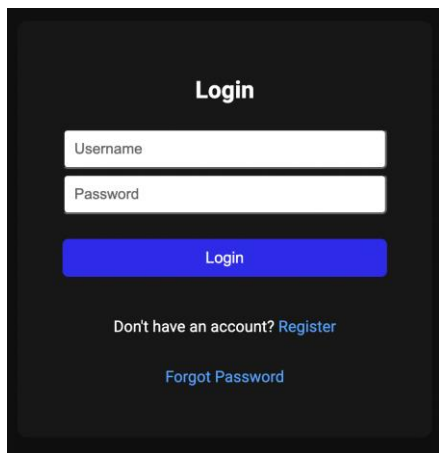

The image shows a login interface with a dark background. At the top, the word "Login" is centered in white. Below it are two white input fields: "Username" and "Password". Under the "Password" field is a blue "Login" button. At the bottom, there are two links in light blue: "Don't have an account? Register" and "Forgot Password".

2. Open account panel and copy API KEY

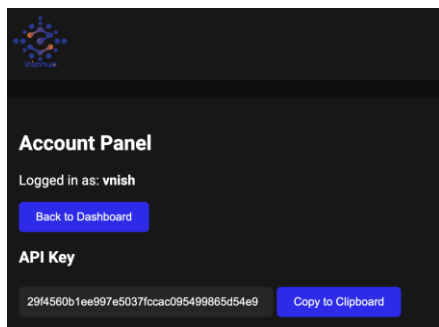

The image shows an "Account Panel" with a dark background. At the top left is the VNISH HUB logo. Below it, the text "Logged in as: vnish" is displayed. There is a blue "Back to Dashboard" button. Under the heading "API Key", a grey box contains the key "29f4560b1ee997e5037fccac095499865d54e9". To the right of the key is a blue "Copy to Clipboard" button.

3. Download , install and run vnish hub local part (windows, mac, android)

<https://vnishhub.com/tools-en>

- Click on “ Network Settings ” button and put miners IP range (first and last address), for example 192.168.1.1 – 192.168.1.255. If your miners password is not standard (admin) you need to specify it in the miner password menu. Put the API key from the vnish hub monitoring account and click save settings.

- Now click “home” button and click “Scan network” and choose miners you want to add to vnish hub monitoring system and click “add to monitoring”

IP Address	Host Name	Miner Model	Platform	Installation Type	Build Name	Available Version
192.168.1.101	Current:1.2.6	Antminer	s19-126	aml	nand	vnishhub v-1.2.6 - RC 4
192.168.1.102	Current:1.2.6	Antminer	s19-126	aml	nand	vnishhub v-1.2.6 - RC 4
192.168.1.104	Current:1.2.6	Antminer	s19-126	aml	nand	vnishhub v-1.2.6 - RC 4
192.168.1.105	Current:1.2.6	antminer	s19-126	aml	nand	vnishhub v-1.2.6 - RC 4
192.168.1.107	Current:1.2.6	antminer	s19-126	aml	nand	vnishhub v-1.2.6 - RC 4
192.168.1.109	Current:1.2.6	antminer	s19-126	aml	nand	vnishhub v-1.2.6 - RC 4

- Open VNISH HUB monitoring account and you will find miners that were added through the local part. Now you can monitor and control the miners using the huge functionality of our monitoring



Vnish Hub Dashboard

Logout

Toggle Theme

Back to Main Page

Miner Farms

Account Panel

Total Hashrate: 773.96 TH/s

Total Power: 19519 W

Total Miners: 8 | 8 | 0

Power Action

Schedules

Stats Chart

Presets

Change Pools

Manage

Virtual Dashboard

Logs

Sorting

Update Firmware

Farm: industry

#	Miner	Firmware	Hashrate	Uptime	Pools	Chip Temperature	Power Consumption	Cooling	Status	Select All
1	001 192.168.1.101 (s19-126)	1.2.6-rc4 vnishrus	98.8534 TH HW: 98%	5 d 22h 16m Booted: 15 days, 13:54	Ping: 32 ms Status: Online	51° - 64°	2575 (W)	Inlet: No data Outlet: No data	mining	☐
2	002 192.168.1.102 (s19-126)	1.2.6-rc5 hub	100.157 TH HW: 98%	12m Booted: 5 days, 22:18	Ping: 28 ms Status: Online	58° - 75°	2898 (W)	Inlet: No data Outlet: No data	mining	☐
3	005 192.168.1.105 (s19-126)	1.2.6-rc5 vnishrus	103.659 TH HW: 98%	5 d 21h 39m Booted: 5 days, 21:42	Ping: 33 ms Status: Online	59° - 75°	2899 (W)	Inlet: No data Outlet: No data	mining	☐
4	007 192.168.1.107 (s19-126)	1.2.6-rc4 vnishrus	102.875 TH HW: 98%	7 d 11h 11m Booted: 15 days, 13:54	Ping: 33 ms Status: Online	50° - 62°	2635 (W)	Inlet: No data Outlet: No data	mining	☐
5	010 192.168.1.110 (s19-126)	1.2.6-rc5 vnishrus	95.1405 TH HW: 98%	12m Booted: 14 days, 10:51	Ping: 34 ms Status: Online	59° - 75°	2709 (W)	Inlet: No data Outlet: No data	mining	☐
6	009 192.168.1.109 (s19-126)	1.2.6-rc4 vnishrus	102.229 TH HW: 98%	7 d 11h 11m Booted: 15 days, 13:54	Ping: 59 ms Status: Online	58° - 74°	2534 (W)	Inlet: No data Outlet: No data	mining	☐